



Protect Your School  
from COVID 19.



CLEAN AIR TECHNOLOGY LTD.

**VIRUS FREE AIR**

## Cleanroom Series

### Professional Control of Airborne Microorganisms and Particulate Matter

The IQAir® Cleanroom Series offers a range of portable, self-contained HEPA antimicrobial air filtration systems designed to meet airborne infection control and particulate contamination challenges in critical indoor environments, such as classrooms, halls, staff rooms.

IQAir® systems filter the air by recirculation.

The superior filtration efficiency, versatility and mobility make the IQAir® Cleanroom Series the most advanced and cost-effective line of mobile air filtration systems available today.

**Worlds No 1 Rated Air Purifier.  
Certified Performance Hospital Grade  
Virus Filtration  
Low energy Consumption  
100% Ozone Free - Plasma Free**



Contact

[www.cleanairtechnology.ie](http://www.cleanairtechnology.ie)

057 86 60591

086 274 5652

**HSE Approved**

## Professional Control of Airborne Microorganisms & Particulate Matter

The IQAir® Cleanroom Series consists of three high-performance air cleaning models (**Cleanroom 100, 250 and H13**). Each model is specifically designed for the removal of solid and liquid airborne particles and aerosols. Due to their certified and guaranteed high filtration efficiency, the systems are predominantly used for airborne infection control in health-care settings and for the control of particulate matter in cleanroom-type applications.



IQAir® Cleanroom 250

While all 3 Cleanroom models focus on the filtration of airborne liquid and solid particulate matter, the Cleanroom 250 also filters a wide spectrum of gaseous contaminants and odours with its V5-Cell™ filter. The H13 is the largest of the 3 models, offering the largest pre-filter surface area (i.e. longest pre-filter life) and the highest air delivery rate. Each system features antimicrobial pre- and HyperHEPA® filters, as well as anti-tampering arm-locks that prevent the system from being opened by unauthorised personnel or accidentally.

### Individually Tested and Certified

To guarantee superior performance, the Swiss manufacturers have taken an uncompromising approach: Each IQAir® HEPA system is individually tested for filtration efficiency and air delivery. The actual test results are documented on a numbered test certificate supplied with each system.

### Positive and Negative Pressure Environments

Each IQAir® Cleanroom system can clean the air by recirculation, or can be connected to special IQAir® ducting adaptors to create positive and negative pressure environments. Pressure differentials are particularly beneficial when the containment of harmful microorganisms and particles or the protective isolation of immuno-compromised patients is required.




### Schools Applications:

- Classrooms
- Staff Rooms
- Halls
- Computer & server rooms

### Advanced Controls

The sophisticated control features of IQAir® systems include a microchip controlled filter-life monitor that calculates the remaining filter life, taking actual use and contamination levels into account. An integrated timer allows the system to be programmed to switch on and off at the desired times on the desired weekdays. The patented IQAir® housing design permits quick and safe replacement of individual filter elements without any tools. For added convenience, each IQAir® system can be operated via remote control. If floor space is limited, a special bracket (VMF™) is available that allows the IQAir® system to be wall-mounted.

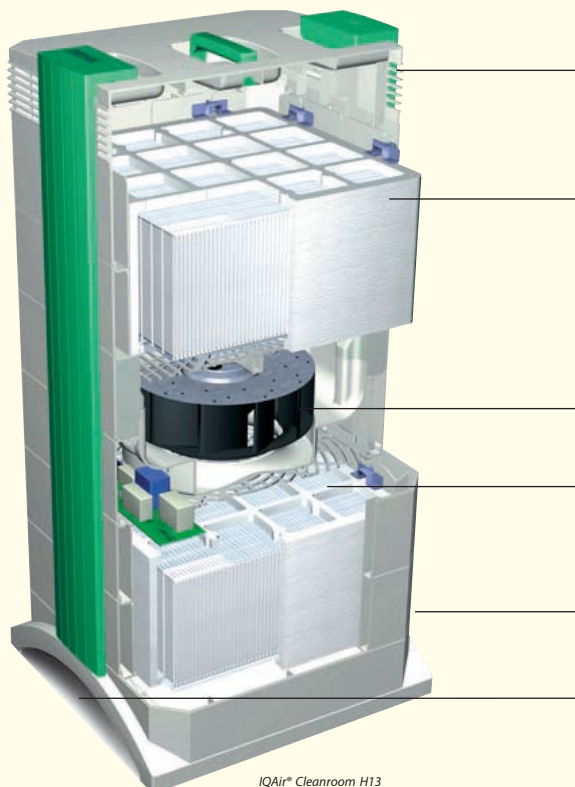

IQAir® Cleanroom H13

## IQAir® Cleanroom Series: Features

### Air Outlet Diffuser

- returns clean, low turbulence, low velocity air
- **optional:** various outlet adaptors to create positive and negative pressure environments or to direct the air flow (OutFlow™)

### Antimicrobial Certified HyperHEPA® Filter

- individually tested & certified for actual filtration efficiency
- guaranteed efficiency of  $\geq 99.97\%$  at  $\geq 0.3 \mu\text{m}$  (HEPA Class H13)
- large filter surface ( $5.5 \text{ m}^2$ ) for long filter life
- individually tested & certified HyperHEPA® replacement filters

### High-Performance Centrifugal Fan

- air delivery with filters: up to  $450 \text{ m}^3/\text{h}$  (H13 model)
- sandwiched between double-walled housing and noise-absorbing filter elements

### Antimicrobial Pre-Filter

- fine dust filtration with mini-pleat 55% efficient media at  $\geq 0.3 \mu\text{m}$  (ASHRAE 90-95%, Class F8) prolongs life of HyperHEPA® filter
- large filter surface (H13:  $5.5 \text{ m}^2$ ) for long filter life (other models  $2.8 \text{ m}^2$ )

### Dual Air Intake

- maximum distance from air outlet prevents immediate re-intake of cleaned air (short-cutting)
- **optional:** various air intake adaptors to create positive and negative pressure environments (InFlow™ and VM InFlow™) or to provide source capture of contaminants (FlexVac™ and VM FlexVac™)